



INFINITE
PERIPHERALS

STIMARE 

INFINEA[®] OMNI

For iPad[®] Air



INFINEA OMNI

USER MANUAL

Made for



iPad

CONTACT INFORMATION

Web: www.stimare.net

General enquiries: info@stimare.net

Support: support@stimare.net

United States:
4730 Tejon Street
Denver CO
80211
USA
Phone: +1-720-257-7070

United Kingdom:
Unit 4, Bramber Court,
Bramber Road,
London, W14 9PW,
United Kingdom
Phone: +44 208 099 8071

Ireland:
46A Patrick Street
Dun Laoghaire
Co. Dublin
A96 YH33
Ireland
Phone: +353 1 685 4600



**INFINITE
PERIPHERALS**

STIMARE 

LEGAL NOTICE

Made for “iPad Air” means that an electronic accessory has been designed to connect specifically to the iPad Air and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPad Air may affect wireless performance.

COMPATIBILITY

Made for:

iPad Air® mobile digital device

iPad Air® is a trademark of Apple, Inc., registered in the U.S. and other countries.
Lightning™ is a trademark of Apple, Inc.






Infinia® Omni is a registered trademark of Infinite Peripherals, Inc.

Table of Contents

CONTACT INFORMATION	1
LEGAL NOTICE	2
COMPATIBILITY	2
BOX CONTENTS	4
GETTING STARTED	5
Warnings, Cautions and Notes	5
First Steps	5
DEVELOPING APPLICATIONS	6
FEATURES	7
<i>Figure 1: Front View</i>	8
<i>Figure 2: Back View</i>	8
<i>Figure 3: Side View</i>	9
ASSEMBLING THE INFINEA OMNI	10
<i>Figure 4: Back of Infinea Omni with Tubular Lock</i>	10
<i>Figure 5: Front View of Infinea Omni with Indication Arrows</i>	10
<i>Figure 6: Opening the Hinge</i>	11
<i>Figure 7: USB Port</i>	11
OPTIONAL CONFIGURATION - iPad ACCESS RESTRICTION	12
<i>Figure 8: Inserting the iPad Air</i>	12
<i>Figure 9: Closed Position</i>	12
POWERING ON THE INFINEA OMNI	13
TROUBLESHOOTING	14
Troubleshooting > Scanner.....	14
TECHNICAL DATA	15
WARRANTY	16
DISCLAIMER	16
SYMBOLS FOR USE	17
FEDERAL COMMUNICATIONS COMMISSION	18
Federal Communications Commission (FCC) Statement.....	18

BOX CONTENTS

Your Infinea Omni will ship with the items listed below:

Qty	Part Number	Description	Image
1	*IO-02D-A-XX *IO-02D-A-SW-XX	Infinea Omni	
1	H0008-1	Tubular security key	
1	P0053	Key plug	
2	H0021	M6 Socket Hex Cap Screws	
1	QSG-10001	Infinea Omni Quick Start Guide	

***Note:** Box contents may vary based on order configuration.

RECOMMENDED ASSEMBLY TOOLS

- m5 hex key
- T20 Torx key

REQUIRED ADDITIONAL EQUIPMENT

- iPad Air
- Lightning cable

ACCESSORIES




The following accessories can be purchased for use with your Infinea Omni:

Part Number	Description
100-A0013	Wall Mount Bracket

GETTING STARTED

Warnings, Cautions and Notes

Please observe the *Warnings, Cautions* and *Notes* presented throughout this manual. An explanation of these items is provided below:

Symbol	Description
	WARNING: Actions may result in a serious outcome (e.g., injury, death or other adverse affect) to the user.
	CAUTION: Special care is required to avoid damage to the product or other property.
	Note: Important points and tips about the product are being provided.

First Steps

The Infinea Omni converts the iPad Air into a powerful solution for the retail industry. The Infinea Omni includes a 2D barcode scanner, allowing barcodes to be scanned directly into the iPad Air.

Step	Purpose	Additional Information
1. Prepare for Mounting <i>(optional)</i>	Preparation of the mounting surface requires installation of the necessary hardware to support and mount the Infinea Omni. If mounting of the unit is desired, the preparation step should be completed prior to Assembling the Infinea Omni (<i>Step 2</i>).	<i>Refer to assembly guide documentation provided with the Wall Mount Bracket accessory.</i>
2. Assembling the Infinea Omni	Integrate the iPad Air and the Infinea Omni.	See manual section: ASSEMBLING THE INFINEA OMNI
3. Install Software	Use of the Barcode Scanner feature requires the installation of software on your iPad Air.	See manual section: DEVELOPING APPLICATIONS
4. Power On the Infinea Omni	Initialize barcode scanner for use.	See manual section: POWERING ON THE INFINEA OMNI

DEVELOPING APPLICATIONS

Software is not provided with your Infinea Omni. Please contact your reseller or Infinite Peripherals for Third Party software solutions.



Integrating the Infinea Omni into your iOS application requires the use of the Infinite Peripherals Universal SDK. The SDK incorporates an API specifically for developing applications to use the barcode scanning functionality of the Infinea Omni.

For additional details on using the Infinite Peripheral Universal SDK, please refer to the SDKs documentation.

For the latest Infinite Peripheral Universal SDK please visit our Developer Portal at:

<http://www.ipcprint.com/developer>

Below are optional settings for the Infinea Omni which can be configured via the SDK.

Programmable Options	Command Options
Central Reading	Enabled Scanner will only read only barcodes selected by aiming point. <div style="text-align: center;">  CMD: D00 </div>
	Disabled (default) Scanner will read any barcode detected within the imager's view. <div style="text-align: center;">  CMD: D0Z </div>

FEATURES

Feature	Description
2D Barcode Scanner	The Infinea Omni supports one-dimensional (1D) and two-dimensional (2D) barcode symbols, which can be read in any direction (omni-directional). The effective reading distance of the barcode reader varies depending on the barcode size. The barcode scanner is capable of reading barcodes on an LCD screen.

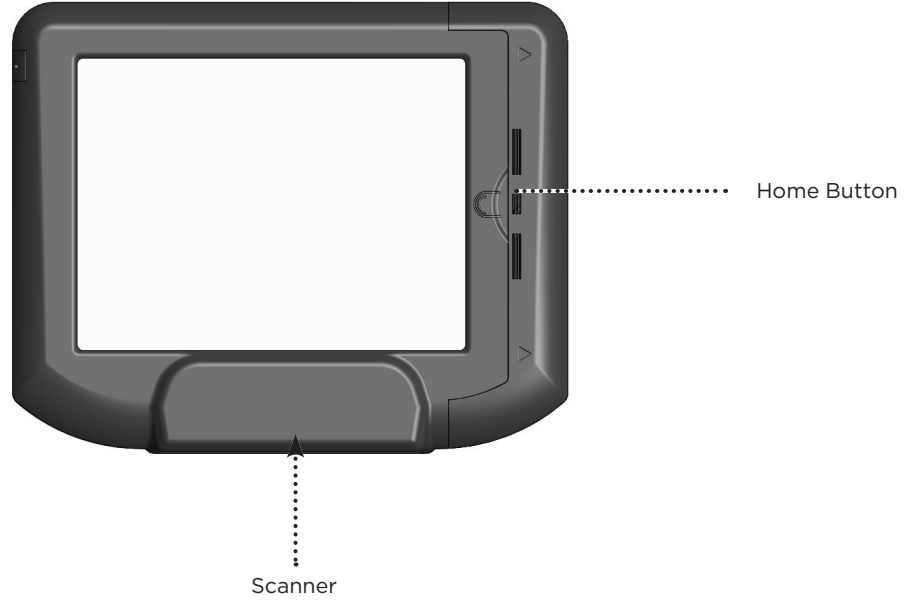



Figure 1: Front View

 **WARNING:** DO NOT look into scanner while in operation.

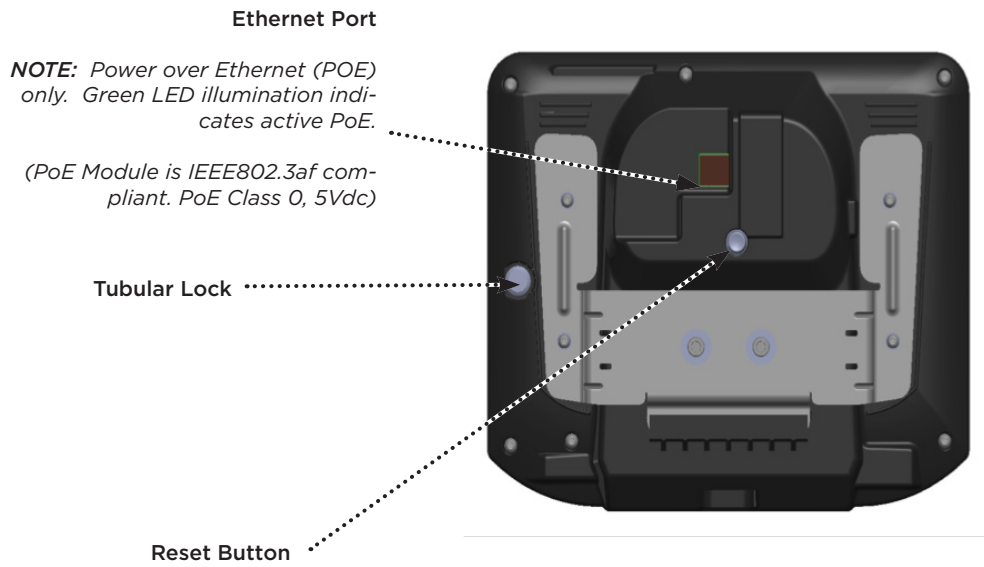


Figure 2: Back View



Figure 3: Side View

ASSEMBLING THE INFINEA OMNI

1. Remove the contents from the packaging material and verify the contents (see **Box Contents**).
2. The unit is shipped with the hinge locked in position. It is necessary to unlock the unit with the security key. Please locate the tubular lock on the back of the unit as shown in *Figure 4* below, and insert the key to unlock accordingly.

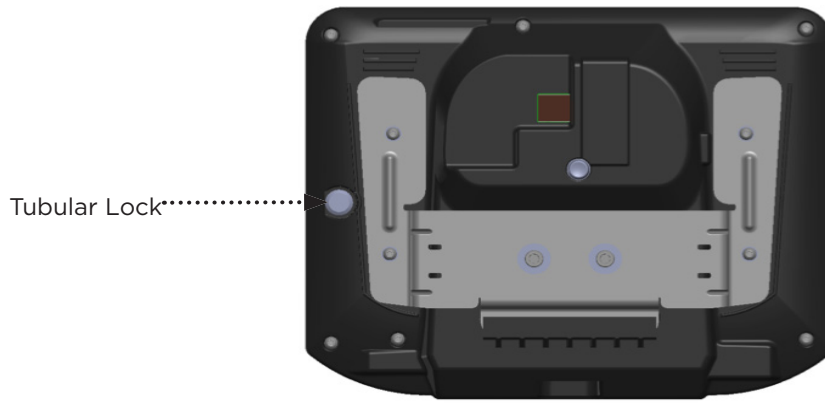


Figure 4: Back of Infinea Omni with Tubular Lock

Note:

i The tubular lock is a retaining lock. Once unlocked, the key will need to rotate to its initial position to release the security key. Otherwise, the lock will retain the key.

3. Once the unit is unlocked, the hinge will slide out and lift accordingly. Arrows will indicate the direction to slide the hinge, as shown in *Figures 5* and *6* below.

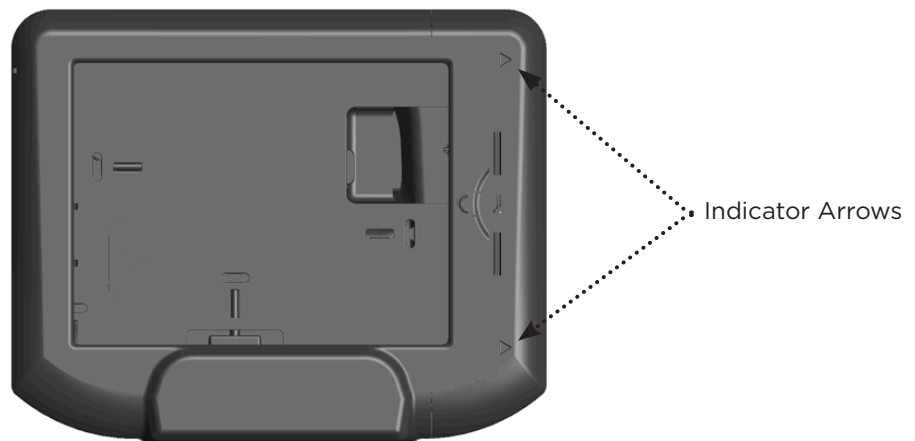


Figure 5: Front View of Infinea Omni with Indication Arrows.



Figure 6: *Opening the Hinge*

4. Before installing the iPad Air device, it is necessary to plug the USB portion of the Lightning cable into the USB port on the board. The port is located on the same side as the hinge. *Figure 7* identifies the location of the port. When inserting the USB plug into the receptacle, leave enough length on the Lightning cable to allow the Lightning connector to connect to the iPad Air device port. Store away the excess cable in the USB pocket.



Figure 7: *USB Port*

5. If mounting, prepare the mounting surface of the Infinea Omni according to the instructions in the Assembly Guide for the Wall Mount Bracket accessory.
6. Insert the iPad Air into the unit, as shown in *Figure 8 below*. Ensure the iPad Air is fully inserted and that the home button on the iPad Air is aligned properly with the access port provided on the right side of the unit.



Figure 8: Inserting the iPad Air

7. Locate the Lightning connector on the iPad Air and insert the connector of the cable into the iPad Air. Neatly coil the cables inside the unit to permit the hinge to close and lock securely.
8. Rotate and slide the hinge back into the locking position, as shown in *Figure 9*.



Figure 9: Closed Position

9. Lock the hinge with the tubular lock from Step 1, and verify that hinge is locked by trying to slide the hinge out.

Note:



To lock the hinge, remove the key and press on the extending shaft of the lock on the backside of the unit.

OPTIONAL CONFIGURATION - IPAD ACCESS RESTRICTION

Standard configuration of the unit includes a security key which permits access to the iPad Air. If required, access to the iPad Air may be restricted by removing the key and installing the key plug and bolts.

POWERING ON THE INFINEA OMNI

Once the iPad Air has been integrated and the external power cable has been connected, the Infinea Omni automatically powers on through Power over Ethernet (POE) capability. The green LED in the ethernet port housing will illuminate when PoE is active. See **Technical Data > Electrical > Input Power** for additional information.

CAUTION:



This equipment is to be connected via indoor PoE network infrastructures only. Do not route to outside power sources.

TROUBLESHOOTING

Troubleshooting > Scanner

If you are having problems scanning barcodes, refer to the table below for possible causes.

Problem	Possible Cause
Scanner does not turn on	<ul style="list-style-type: none"> • Power is not available via Power over Ethernet (PoE). Green LED not illuminated. • Infinea Omni not powered on by software • Faulty scan engine
No barcode data being returned during scanning	<ul style="list-style-type: none"> • Unreadable barcode • Software decoding incorrectly.
Scanner beep is not audible	<ul style="list-style-type: none"> • Sound mode is not enabled.
Unable to scan certain barcode symbols	<ul style="list-style-type: none"> • Barcode type is not enabled. • Barcode type is not supported. <p>See Technical Data > Electrical > Barcode Type for additional information.</p>

If you are having problems with your Infinea Omni which not addressed by the table above, please contact technical support at **support@ipcprint.com**.

TECHNICAL DATA

MECHANICAL	
Compatibility	iPad Air
Dimensions (without wall mounting bracket)	283mm (L) x 225mm (W) x 84mm (H) (11.14 in. x 8.8 in. x 3.3 in.)
Weight	1250 grams (44.1 oz) without iPad Air
Buttons	<ul style="list-style-type: none"> • Home Button • Scanner Hardware Reset Button • Power Button (<i>Optional Configuration</i>)
ELECTRICAL	
Input Power	PoE class 0, IEEE802.3af compliant, RJ-45, Cat5e, 36V to 57V input, 5V 2.4A max output
Barcode Scanner	2D High Speed Imager (supports all major 1D or 2D barcodes)
Visual Indicators	Green LED indicates that there is PoE power to the RJ-45 connector panel.
ENVIRONMENT	
Operating Environment	Temperature: 10°C to 40°C (50°F to 104°F)
	Humidity: 5 to 90% RH
Storage Environment	Temperature: -20°C to +50°C
	Humidity: 5 to 90% RH
CERTIFICATIONS	
UL, FCC, CE, RoHS, RCM	

WARRANTY

Infinite Peripherals (IPC) does not warrant, and is not responsible for, any smart phone or other device made by anyone other than IPC or approved manufacturer. If a material or workmanship defect arises with regard to any IPC product, and a valid claim is received within the Warranty Period, IPC (at IPC's sole discretion) will:








- (1) repair the Infinea Omni product using new or refurbished parts, or
- (2) replace the Infinea Omni product with a new or refurbished Infinea Omni product.

For purposes of this limited warranty, "refurbished means a product or part that has been substantially returned to its original specifications. In the event of a defect, these are your exclusive remedies.

DISCLAIMER

NO WARRANTY. This technical documentation is provided AS-IS. Furthermore, the documentation does not represent any commitment on the part of Infinite Peripherals, Inc. and does not warrant that it is accurate, complete or error free. Any use of the technical documentation is at the risk of the user. Infinite Peripherals, Inc. reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should, in all cases, consult Infinite Peripherals, Inc. to determine whether any such changes have been made. Infinite Peripherals, Inc. shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. Infinite Peripherals, Inc. does not assume any product liability arising out of, or in connection with, the application or use of any product or application described herein.

SYMBOLS FOR USE

Symbol	Definition
	Consult Instructions for Use
	Manufacturer
	Manufacture Date
	Caution
	Serial Number
	Part Number
	Waste Electrical and Electric Equipment

FEDERAL COMMUNICATIONS COMMISSION

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference; in which case, the user will be required to correct the interference at their own expense.

⚠ CAUTION:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation

⚠ CAUTION:

This is a Class A product. In a domestic environment, this product may cause radio interference; in which case, the user may be required to take adequate measures